

Important safety instructions.
Read carefully and keep for future reference.

Environmental protection	14
Installation	15
Warning	16
General Description / Location	17
Control panel	19
Setting the clock / Microwave power settings	20
Setting a microwave programme / Express programme	21
Memory keys	22
Pointers	23
Care & Cleaning	24

ENVIRONMENTAL PROTECTION

This appliance's packaging material is recyclable. Help recycle it and protect the environment by dropping it off in the municipal receptacles provided for this purpose.



Your appliance also contains a great amount of recyclable material. It is marked with this label to indicate the used appliances that should not be mixed with other waste. This way, the appliance recycling organised by your manufacturer will be done under the best possible conditions, in compliance with European Directive 2002/96/EC on Waste Electrical and Electronic Equipment. Contact your town hall or your retailer for the used appliance collection points closest to your home.

We thank you doing your part to protect the environment.

INSTALLATION

Before connection

- **Make sure that your oven has not suffered any damage during transport (deformed door or door seal, etc.). If you see any signs of damage, contact your dealer before use.**
- Check the power voltage. If there is a PERMANENT undervoltage (200-210 volts), consult your electrical installer.

GB

Electrical connection


Check that:

- the electrical installation has sufficient voltage.
- the supply cables are in good condition
- the diameter of the wires complies with the installation requirements.
- your equipment has a protection of at least 10 amps.

If in doubt, contact your electrician.

The electrical connections should be made before the appliance is installed in its housing.

Electrical safety must be ensured through proper installation in the housing. During installation and maintenance operations, the appliance must be unplugged from the electrical grid; fuses must be cut off or removed.

The appliance must be connected using a (standardised) feeder cable with 3 conductors of 1.5 mm² (1 live + 1N + ground) which must be connected to the 220-240 V ~ monophase network using a CEI 60083-standardised 1 live + 1N + ground electrical outlet or one which complies with installation requirements. The protection cable (green-yellow) is connected to the appliance's  terminal and must be connected to the appliance's ground.

If the connection is made with a plug, it must remain accessible after the appliance has been installed.

The oven's neutral (blue cable) must be connected to the network's neutral.

Ensure your electrical installation has a system accessible to the user which can cut off the appliance from the power grid, with a contact opening of at least 3mm for all the terminals.

If the supply cable is damaged, it must be replaced by the manufacturer, its after-sales service or any other similarly qualified person to avoid any danger.



Warning:

 
We cannot be held responsible for any accident resulting from an inexistent, defective or incorrect ground lead.

If the oven presents any irregularity, unplug the appliance or remove the relevant fuse at the oven's connection lead-in.

WARNING

- Your appliance is designed exclusively for the domestic purposes of defrosting, heating or cooking foods. The manufacturer bears no responsibility in the case of improper usage.
-
- Only use utensils that are suitable for use in microwave ovens.
 - To avoid deterioration of your microwave oven, never operate it empty or without the turntable.
 - Never tamper with the lock mechanism of your microwave oven; you could cause damage requiring repair by an authorised technician.
 - When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
 - It is not advisable to use metal recipients, forks, spoons, knives, metal ties or staples for deep-freeze bags.
 - The contents of feeding bottles or baby food jars shall be stirred or shaken and the temperature checked before consumption in order to avoid burns.
 - Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
 - Liquids and other foods must not be heated in sealed containers they are liable to explode.
 - Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
 - Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
 - For small amounts (one sausage, a single croissant, etc.), place a glass of water alongside the food item.
 - Time settings that are too long may dry out and burn the food. To avoid such incidents, never use the same cooking times as those recommended for traditional ovens.
 - If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.

GENERAL DESCRIPTION

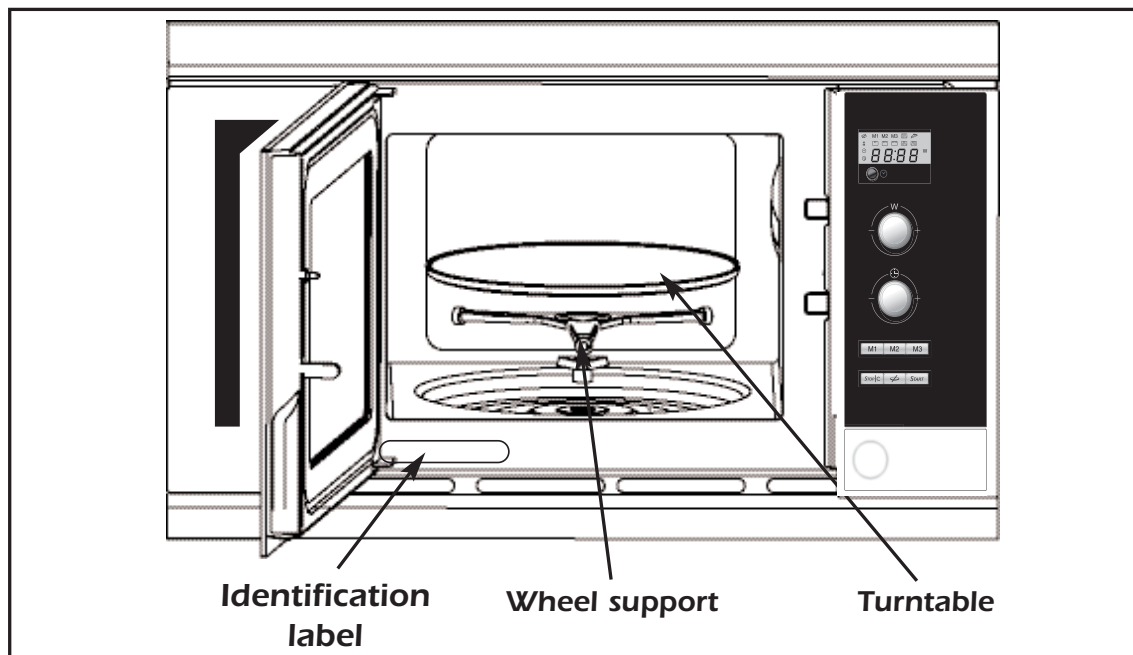

GB

■ THE TURNTABLE :

ensures equal cooking of food throughout with no need to intervene.

- It may be used as a cooking dish.
- Rotation is controlled by the drive shaft and the wheel support.
- The turntable rotates in both directions.
- If it does not turn, verify that all components are properly positioned.

 
■ TURNTABLE OFF \varnothing :

stops the turntable from revolving in order to use platters which require the entire oven space. When stopped, remember to stir the contents or turn the dish midway through the programme.

■ THE WHEEL SUPPORT :

Do not try to rotate the roller ring manually, as you could damage the drive system. If it does not turn smoothly, make sure that there is nothing in the well beneath the turntable.

GENERAL DESCRIPTION

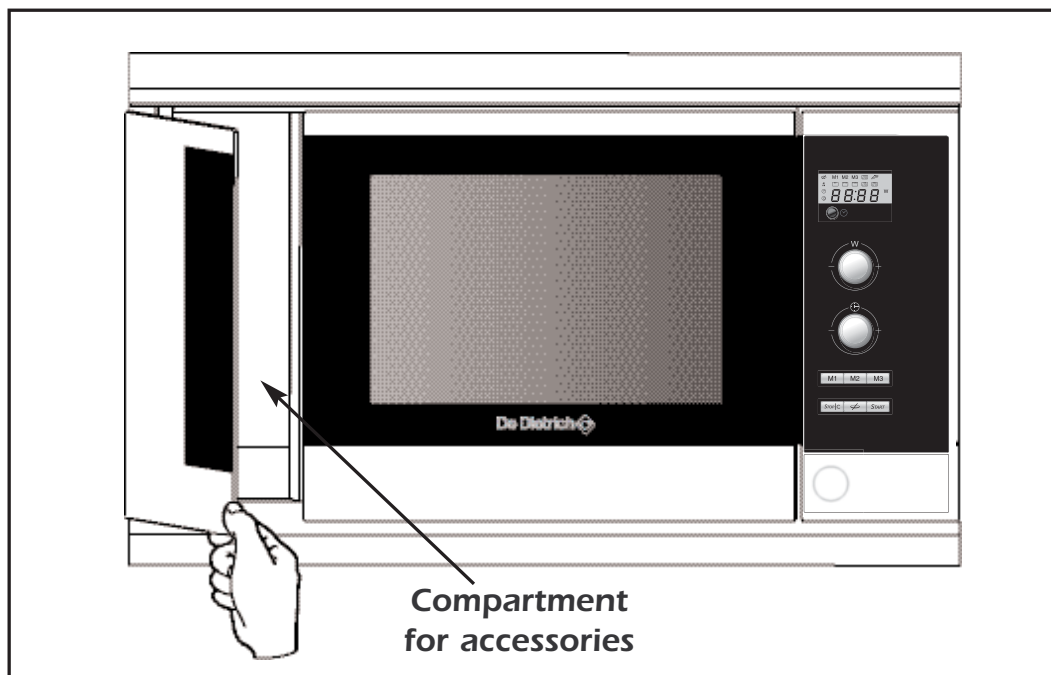

▪ **The compartment for accessories :**

to store various accessories which can be used with the appliance.
(eg: any plate, plate cover, manual...).

WARNING : Do not store any food nor any cleaning materials within the recess.
Pull the small door to open as shown above.

LOCATION

- The appliance should be installed at a distance of 85 cm above the floor.
- Place the oven on a flat and horizontal surface, away from any source of heat or steam.
- Make sure that air may circulate freely around the oven.
- Check all the characteristics and building-in conditions in the user's manual supplied with the appliance.
- Make sure that nothing obstructs the ventilation louvers at the back of the appliance.
- Make sure the electrical plug will be accessible after installation.
- Do not use your appliance immediately (wait approx. 1-2 hours) after transfer from a cold place to a warm place as condensation may cause a malfunction.

CONTROL PANEL

A Display window :

to simplify programming, the display indicates : the time of day, the programme length, and the functions programmed.

B The clock setting key :

to set the clock.

C Microwave power selector knob W :

to set the microwave power level.

D Time selector knob :

to set the clock, the programme length.

E MEMORY keys M1/M2/M3 :

for rapid access to 3 preprogrammed operations.

F CLEAR/STOP key C/STOP :

to interrupt (press once) or to cancel a programme (press twice).

G STOP-TURNTABLE key :

 
to stop the turntable from revolving.

H START key :

to start all programmes.

I Door open button :

to open the door or stop the oven.

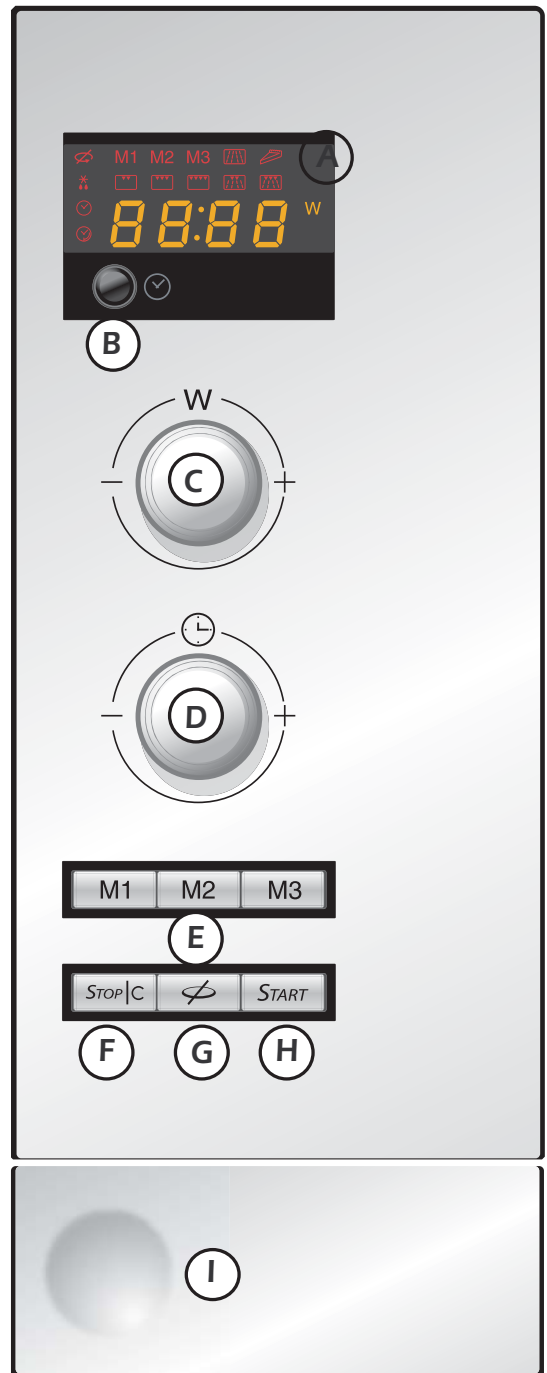



GB

 
SETTING THE CLOCK

After the plugging in of the appliance or a power cut, the flashing 0 0 : 0 0 invites you to set the clock.









To set the clock :

- Push the clock setting key .
- Set the clock with the time selector knob (ex. 12:00).
- Validate with a single push on the clock setting key .



The clock is set.


MICROWAVE POWER SETTINGS

POWER SETTING			APPLICATION
	DEFROST	1 5 0	To defrost meat, fish, fruit, bread or delicate dishes.
	VERY LOW COOK	2 5 0	To top off cooking of delicate dishes or to cook very slowly.
	LOW COOK	3 5 0	To finish programmes begun with the HIGH COOK power setting which might otherwise over-cook on the outside, for instance veal or pork roast.
	SIMMER	5 0 0	To cook fish and poultry. To finish programmes begun with the HIGH COOK power setting such as beans, lentils or milk-based dishes.
	REHEAT	7 0 0	To reheat all fresh or frozen pre-cooked dishes and frozen vegetables.
	HIGH COOK	7 5 0	To cook fresh vegetables and soup. To heat up all liquids.
MICROWAVE OUTPUT POWER : 750 W			

SETTING A MICROWAVE PROGRAMME

Your microwave oven is now plugged in and the clock is set.

 
Open the door, set the dish inside, close the door. If the door is not properly shut, the appliance will not operate.

If the dish is too large to turn freely inside the oven, press the **STOP TURNTABLE** key  before or during the programme.

6 microwave power levels are available :
(150 - 250 - 350 - 500 - 700 - 750 W).


Example : Set a microwave programme at the HIGH COOK power level (750 W).

① Turn the microwave power selector knob to 750 W

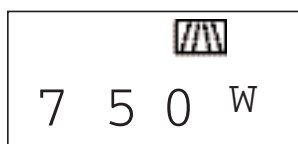

is displayed.

 ② Set the programme time with the time selector knob, ex. 5 minutes :

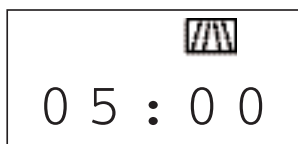


is displayed.

③ Press **START**.


The programme begins : the turntable revolves, the oven light comes on. 3 beeps announce the end of a programme. The beeps are repeated every minute for 10 minutes until you open the door.

 If there is an error in the programming, press the **CLEAR/STOP** key twice.

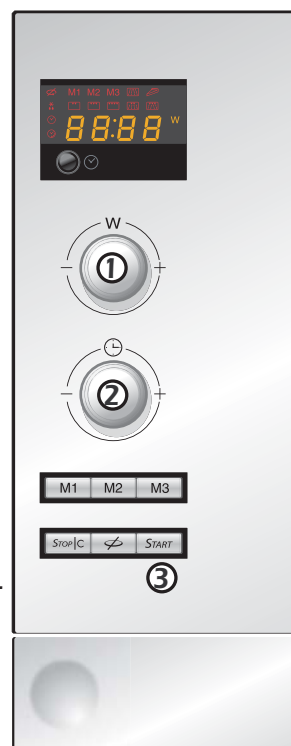

EXPRESS PROGRAMME

 ① Set the programme time with the selector knob, ex. three minutes :

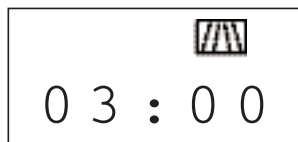

is displayed.

② Press **START**.

The HIGH COOK programme begins automatically : the turntable revolves, the oven light comes on.

MEMORY KEYS M1 / M2 / M3

The Memory keys allow you to store 3 frequently used programmes which you can then access simply by pressing **M1 / M2 / M3**. You may memorize any programme you wish.

Example : Use the Memory key to preprogramme the heating up of a plate of food.

 
Proceed as if setting the programme for immediate use :

- ① Turn the microwave power selector knob to HIGH COOK (750 W) :




is displayed.

- ② Set the programme time with the time selector knob, ex. 2 min :

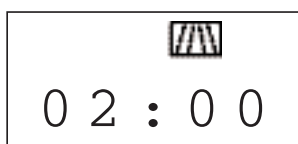


is displayed.

 - ③ Instead of pressing **START**, press the **MEMORY key M1**; after several seconds you will hear a tone confirming that the personalized programme has been memorized.

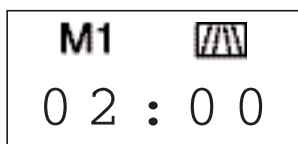

is displayed.

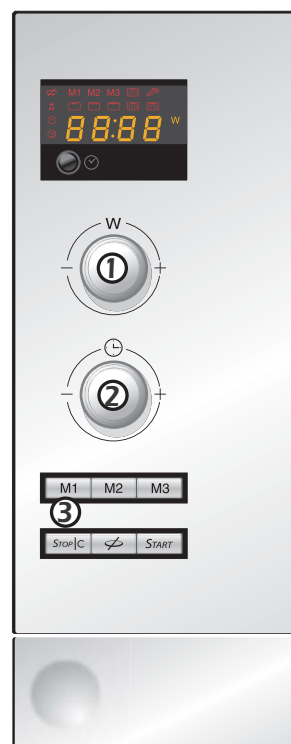 


You may memorize two more programmes by pressing Memory keys M2 / M3.

To call up a programme, press the corresponding Memory key; the preprogrammed information is displayed.

Press **START**, the memorized programme begins.

POINTERS

WHILE THE OVEN IS OPERATING :

- You may stop or start the turntable revolving during a programme by pressing the **TURNTABLE STOP** key  .
- To change a programme, press the **C/STOP** key twice and programme again.
- If you open the door before the end of the programme, shut the door and press the **START** key to continue the programme.
- When using the defrost function (150W), turn the food midway through the programme to obtain the best results. Close the door and press the **START** key to continue the second half of the programme.
- If you remove a dish before the end of the programme, press the **C/STOP** key twice to erase the programme.

GB

Troubleshooting guide


<u>Problem</u>	<u>Suggestion</u>
ñ The microwave oven is noisy when operating. The turntable does not revolve correctly.	D Clean the wheels and the well area beneath the turntable.
ñ The food is not heated up.	D Make sure that you use only containers which are adapted to microwave cooking.
ñ The appliance produces sparks.	D Wipe the water off with a cloth in order to avoid corrosion.

CARE & CLEANING

- **WARNING** : It is recommended to clean the oven regularly and to remove any food deposit inside and outside the appliance. Use a soapy and wet cloth. If the appliance is not kept clean, its surface could deteriorate adversely affecting its lifespan and possibly result in a hazardous situation. If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.




 - A steam cleaner is not to be used.
- Do not use abrasives, alcohol or solvents as they are liable to damage the oven.

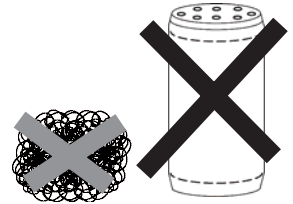


- In the event of bad odors or caked-on dirt, boil water containing lemon juice or vinegar in a cup for 2 minutes and clean the walls with a little dishwashing liquid.

 - The turntable can be removed for cleaning. For easy removal, press on one edge to tilt. If you remove the drive, do not allow water to enter the motor shaft hole. Be sure to put the turntable and wheel support back in their proper place.

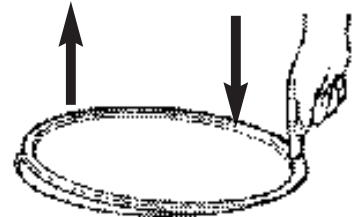

- If the equipment has sustained any damage :
 - **Check that the door is not deformed.**

 - If the oven does not operate, before calling the repairman :
 - Check the electrical supply.
 - Check that the door is properly closed.
 - Check your programming.

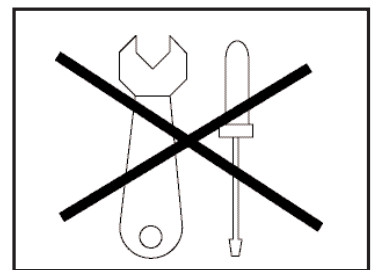

CAUTION : never attempt to repair your oven yourself.

WARNING : it is dangerous for anyone other than qualified personnel to make any repairs requiring removal of the cover providing protection from exposure to microwave energy.

Only a specially trained technician is qualified to repair your microwave oven.